




User Guide



BOLLA

For more Information:
www.wiltec.hk

Model No.:WT-0067

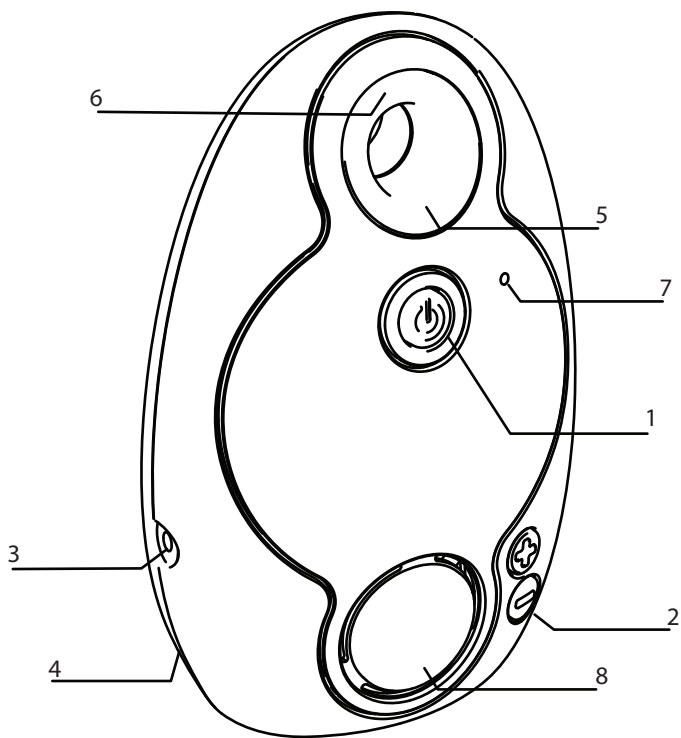

INTRODUCTION

Thank you for choosing BOLLA, the wise baby monitor. This appliance is an electronic wireless communication system that allows you to keep an eye on baby while he is asleep using your Android smartphone via Bluetooth.

PACK CONTENTS

- 1 BOLLA baby monitor unit
- 1 main supply adapter
- 2 NiMH, 1.2V, 550mAh AAA batteries
- 1 Quick Start Guide

WARNING

- This baby alarm CANNOT IN ANY CIRCUMSTANCES REPLACE the supervision of the baby by an adult.
- Always make sure that electrical appliances and their wires are kept out of children's reach.
- Remove all the batteries from the battery compartment when the device is not going to be used for long periods.
- If there is too short a distance between the device and your smart phone, you may obtain a Larsen effect (very shrill sound). To avoid this, simply increase the distance between the product and your smart phone or lower the volume on the receiver.
- The appliance's range varies according to the obstacles it meets (lie of the land, number of partition walls between the transmitter and the receiver, the presence of metal structures, level of charge of the batteries, etc.).
- The system should not be used to eavesdrop on private conversations. This type of use is strictly illegal.
- Please read all the instructions carefully before you use the product.
- Keep the appliances well away from all sources of heat (maximum 40°C) and humidity.

WARNING

- Check regularly that the product is working properly.
- Clean the appliance with a soft, dry cloth. Do not immerse it in water or expose it to water drops or splashes.
- The adapters may become warm when the appliance is in use; when you use them, make sure that the heat can disperse and do not cover them.
- The appliance should not be dropped or subjected to violent impacts.
- Use this product only with the electrical connection included or supplied as an accessory.
- Do not place sources of naked flames, such as lit candles, on the appliance.
- Please care for the environment: do not throw used batteries out with the household rubbish, dispose of them in the collection points provided.
- Do not install new batteries with used ones and do not mix different types of batteries
- To avoid all risk of electrocution, do not expose the appliance to rain or damp conditions.
- Batteries should not be exposed to excessive heat (sun, fire, etc.)
- The power supply adapter acts as an insulation device and should be easily accessible.
- Batteries should not be exposed to excessive heat from the sun, a fire or other similar origin.
- The electricity supply switch should be easily accessible.
- The product should be placed approximately 1 – 1.5 metres away from the child, on a flat, stable surface, with the microphone facing the child.
- The product, the main supply adapter and wire should be kept out of the child's reach.

WARNING

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property.
- Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.
- Use only the types of the batteries which are indicated in this manual.
- Do not dispose the used batteries as domestic waste. Dispose them in accordance with local regulations.

ATTENTION!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE PROTECTION OR ATTEMPT TO OPEN MAINS ADAPTERS.
DO NOT WET MAINS ADAPTERS, THE BABY UNIT OR PARENT UNIT.
DO NOT EXPOSE TO HUMIDITY OR ATTEMPT TO OPEN THEM.
THIS MAY BE A SOURCE OF DANGER AND SHALL VOID THE WARRANTY.

PRODUCT DESCRIPTION

1. On/Off Button
2. Volume +/- Button
3. Main Supply Socket
4. Battery Compartment
5. Indicator Light
6. Night Light
7. Microphone
- 8.. Speaker

SETTING UP BOLLA


Turning on BOLLA

The Bolla baby monitor runs on either 2 AAA batteries or with a main supply adapter.

Use with batteries: open the battery compartment by turning the cover counterclockwise, insert the 2 AAA batteries, observing the correct polarity, then close the compartment.

Use only the provided batteries

Make sure the compartment is firmly shut to prevent children from swallowing the batteries.

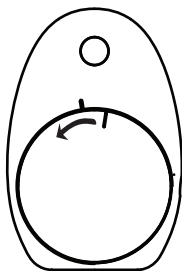

Use with supplied adaptor: Plug the power adaptor cable into the main supply socket on the Bolla unit and plug the other end into the mains power, the indicator light turns RED as the BOLLA is plugged into the power supply.

Use only the supplied adaptor.

Press the "On/Off" button to turn on the unit, the "Indicator light" LED will be blinking in BLUE.

If BOLLA is plugged into the main power supply, the "Indicator light" LED will be alternating between PURPLE AND RED.

SETTING UP BOLLA

Smartphone

Install the “BabyMon” APP on your Android Device, which can be found by scanning the QR code below with a 3rd party APP.




Note that the “BabyMon” APP only supports Android Device with Android 4.4.2 or above. If your device has system lower than that, please update it to Android 4.4.2 or above.

Open the Bluetooth setting menu on your smartphone and turn on the Bluetooth function.

Search the Bluetooth device and select the “Bolla” and let the Android system pair with it.

After successfully complete the pairing and connecting process, the “Indicator light” LED will stop blinking and become steady on.

Connecting YOUR BOLLA

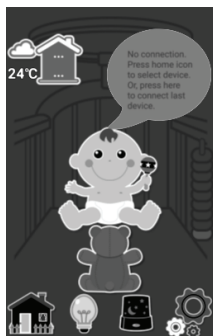


Tap on the “Home” icon on the lower left corner to enter the add device interface.

Or you can tap on the pop-up on upper right corner of the Main Menu to connect to last connected device if there is device connected before.

And tap on the “add” icon to get the paired device list. The “Bolla” device will be displayed, tap on it to assign the name and then select an icon to represent it.

To connect a device, tap on the assigned icon and tap ok.

“Bolla” will be shown above the baby in APP.

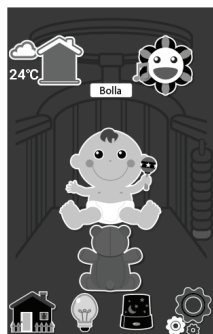

The BOLLA is ready to use now.

(If the Bluetooth function of smartphone is not activated, the APP will request to enable the Bluetooth.

Please select “YES” to activate the Bluetooth on Smartphone first.)

Using Your BOLLA

Adjust the Crying Level

The “BabyMonitor” APP has eight crying alert levels, and it is represented by beads on the right hand side of the Main Menu.

The selected bead will be highlighted. You can tap on a bead to set the crying level. Once the crying/sound level at the side reaches this level, the sound will be transmitted to the smartphone/APP.

If you select a higher bead, the sound on Bolla side needs to be louder to activate the sound transmission.



Talk Back

You can activate the Talk back function by tapping and holding the little bear in the Main Menu.



The Talk Back will be continued until you release the bear. Talk to the smartphone and your baby can hear your voice.

Please note that when using Talk Back you will not be able to hear your baby until the talk back ends.

Using Your BOLLA

Nightlight

You can set a comforting nightlight on the BOLLA.

Tap on the Nightlight icon in the APP Main Menu, the Nightlight on the unit will be switched on/off.



Play Lullaby

The BOLLA unit has lullabies that can be played to gently soothe your baby. Also, you can choose songs/stories from your smart phone to play.

By default, the unit will play 3 lullaby repeatedly. Tap the handle icon in the APP Main Menu, the Bolla will start to play the lullabies.



Play Music/ Story

To play the song or story from the smartphone, press the flower icon; the APP will jump to browse your music directory.



Search and select your song/ story by tapping on it, and then the unit will start to play the song/story.

Using Your BOLLA

Adjust the Loudspeaker Volume

There are 5 volume levels.

To change volume of Talk back/ playing lullaby, press "Volume +/-" buttons on BOLLA to adjust the volume.

To change volume of playing music from your smart phone, press "Volume +/-" buttons on your phone to adjust the volume.

(While the BOLLA is not in Talk Back mode or playing music, if you try and set the volume higher or lower than the 5 settings available on the unit, you will hear an error tone.)

Using Your BOLLA

Change Country/City of Weather Forecast

You can change the country/city by tapping the country/city setting icon on the right lower corner in the APP Main Menu.

In the select country or city interface, enter your preferred country or city, and then the weather information of the selected country/city will be changed.

Weather Forecast

If your smartphone is connected to the internet, the APP will collect the weather information from the internet and display on the top left corner.

You can switch the information from current weather to tomorrow forecast.

Tap on the temperature; the weather information will change to display the tomorrow forecast for 5 seconds.

TECHNICAL SPECIFICATION

BOLLA

Power:

Internal:

2 NiMH, 1.2V, 550mAh type AAA batteries

External:

via 100-240V~ 50/60Hz /6V 500mA main switching adapter

Transmission Frequency: 2400 - 2483.5MHz

Transmission power: 20dBm max

Main Supply Adaptor

Tempao : S003GV0600050/S003GB060050

Input:100-240V ~50/60Hz 150mA

Output: 6.0V  500mA

N.B. Use only with provided adaptor.

Postal Address:

Ten Pao Industrial Co., Limited

Room 10-12, 6/F,

Kwong Sang Hong Centre,

151-153 Hoi Bun Road, Kwun Tong,

Kowloon,

Hong Kong

Battery

GREPOW Ni-MH AAA550 1.2V

OR

CORUN Ni-MH AAA550 1.2V


N.B. Use only with provided batteries.

Declaration of Conformity

Hereby, Wiltec declares that Wise Baby Monitor is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for Wise Baby Monitor is available from:

www.wiltec.hk/DOC

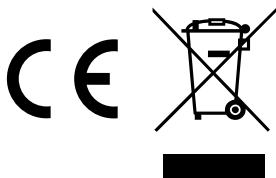

All rights reserved.

Wiltec HK Company Limited
Model : WT-0067

Use only power supplies and
batteries listed in user manual

Made in China