

Quick Start Guide

SAFETY INSTRUCTION



- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property.
- Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.
- Use only the types of the batteries which are indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose the used batteries as domestic waste. Dispose them in accordance with local regulations

- When not use the equipment, please unplug the power supply.
- Make sure that the electrical appliance and their wires are kept out of children.
- Do not leave any packaging materials (plastic bags, cardboard boxes, etc.) within the reach of children as these can be hazardous.
- Only use the AC/DC mains adapters supplied with the product. Use of other adapters could damage the unit and cause danger to the user.
- -Make sure the compartment is firmly shut to prevent children from swallowing the batteries

BOLLA

For more Information: www.wiltec.hk

Model No.: WT-0067

OVERVIEW

IMPORTANT NOTE

It is very important that you read the User Guide carefully as it contains detailed information. Please refer to the complete user manual which is available online at

www.wiltec.hk

Pack Contents


- 1 BOLLA baby monitor unit
- 1 main supply adapter 2 NiMH, 1.2V, 550mAh AAA batteries
- 1 Ouick Start Guide

2 **APP**

Install the "BabyMon" APP on your Android Device, which can be found by scanning the OR code below



NOTE: the "BabyMon" APP supports only Android Device with Android 4.4.2 or above

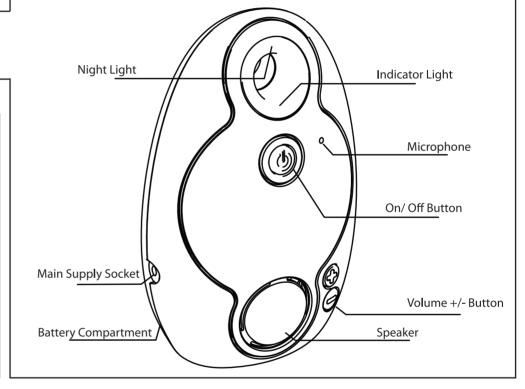


SETTING UP BOLLA

Turning on BOLLA

The BOLLA baby monitor runs on either 2 AAA batteries or with a main supply adapter.

Use with batteries: open the battery compartment by turning the cover counterclockwise, insert the 2 AAA batteries, observing the correct polarity, then firmly close the compartment.

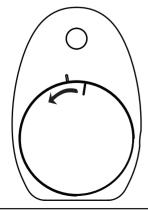

Use with supplied adaptor: Plug the power adaptor cable into the main supply socket on the BOLLA unit and plug the other end into the mains

The indicator light will turn RED.

You are advised to charge your BOLLA 10 hours for the first time.

To turn on BOLLA, simply press the "On/ Off" Button



When not charging, the "Indicator light" LED will be blinking in BLUE.

When charging, the "Indicator light" LED will be alternating in RED and

Smartphone

Open the Bluetooth setting menu on your smartphone and turn on the Bluetooth function.

Search for the Bluetooth devices and select the "Bolla" and let the Android system pair with it.

After successfully complete the pairing and connecting process, the "Indicator light" LED will stop blinking and become steady on.

When not charging, the "Indicator light" LED will be in BLUE.

When charging, the "Indicator light" LED will be in PURPLE.

CONNECTING YOUR BOLLA




Tap on the "Home" icon on the lower left corner to enter the

Or you can tap on the pop-up on upper right corner of the Main Menu to connect to last connected device if there is device connected before



And tap on the "add" icon to get the paired device list. The "Bolla" device will be displayed, tap on it to assign the name and then select an icon to represent it.

To connect a device, tap on assigned icon and tap ok "Bolla" will be shown above the baby in APF

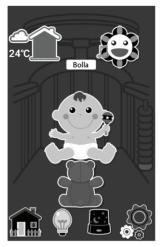

The BOLLA is ready to use now

(If the Bluetooth function of smartphone is not activated. the APP will request to enable the Bluetooth

Please select "YES" to activate the Bluetooth on Smartphone

USING YOUR BOLLA

Adjust the Crying Level

The "BabyMonitor" APP has eight crying alert levels and it is represented by beads on the right hand side

The selected bead will be highlighted. You can tap on a bead to set the crying level. Once the crying/sound level at the BOLLA side reaches this level, the sound will be transmitted to the smartphone/APP.

If you select a higher bead, the sound on BOLLA side needs to be louder to activate the sound



Adjust the Loudspeaker Volume

To change volume of Talk back/ playing selected song, press "Volume +/-" buttons on BOLLA to adjust the volume

To change volume of playing music from your smartphone, press "Volume +/-" buttons on your phone to adjust the

(While the Bolla is not in Talk Back mode or playing music, if you try and set the volume higher or lower than the 5 settings available on the unit, you will hear an error tone.)

Talk Back

You can activate the Talk back function by tapping and holding the little bear in the Main Menu



The Talk Back will be continued until you release the bear. Talk to the smartphone and your baby can hear your voice

Please note that when using Talk Back you will not be able to hear your baby until the talk back ends.

Nightlight

You can set a comforting nightlight on the BOLLA.

Tap on the Nightlight icon in the APP Main Menu, the Nightlight on the unit will be switched on/off



Play LullabyThe BOLLA unit has Iullabies that can be played to gently soothe your baby. Also, you can choose songs/storys from your smartphone to play.

By default, the unit will play 3 Iullaby repeatedly. Tap the handle icon in the APP Main Menu, the BOLLA will start to play the Iullabies.



Play Music/ Story

To play the song or story from the smart phone, press the flower icon; the APP will jump to browse your music directory.



Search and select your song/ story by tapping on it, and then the unit will start to play the song/story.

TECHNICAL SPECIFICATION

BOLLA

2 NiMH, 1.2V, 550mAh type AAA battery

via 100-240V~ 50/60Hz /6V 500mA main switching adapter

Transmission Frequency: 2400 - 2483.5MHz Transmission power: 20dBm max

Main Supply Adaptor

Tempao : S003GV0600050/S003GB060050 Input:100-240V ~50/60Hz 150mA Output: 6.0V 500mA

Ten Pao Industrial Co., Limited Room 10-12, 6/F, Kwong Sang Hong Centre, 151-153 Hoi Bun Road, Kwun Tong, Kowloon

Battery GREPOW Ni-MH AAA550 1.2V CORUN Ni-MH AAA550 1.2V





All rights reserved

Wiltec HK Company Limited Model: WT-0067

Use only power supplies and batteries listed in user manual

Made in China

NOTE

Declaration of Conformity can be found on : w.wiltec.hk/DOC



To access the user instruction online, use the reference model number written at the bottom of the Cover Page of this Quick Start Guide.

www.wiltec.hk

